

FECS45-10 - for the Detection of Chlorine

Features:

- * High sensitivity/selectivity to Cl_2
- * Linear output
- * Long life
- * Stable baseline
- * Unique leak-proof structure

The FECS45-10 is a unique electrochemical-type chlorine sensor. Its most notable feature is its unique leak-proof structure, making it ideal for Cl_2 monitors and detectors in various fields.


Applications:

- * Portable and fixed installation Cl_2 monitors
- * Cl_2 detectors




Sensitivity Characteristics:

Typical characteristics (linearity) of FECS45-10 (20°C) are shown below.

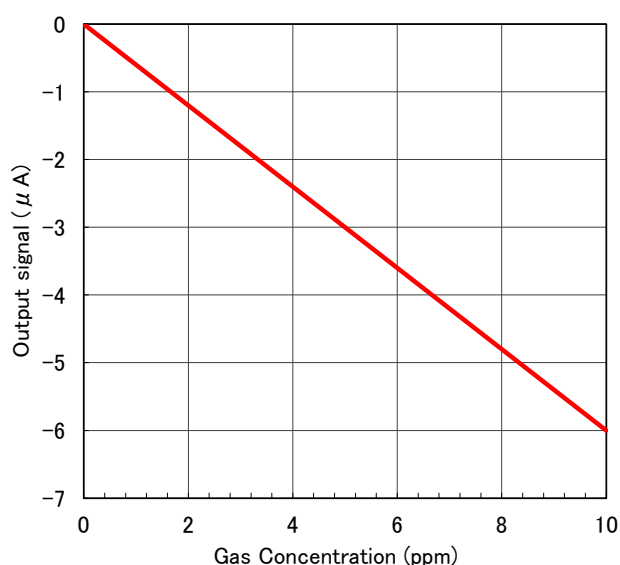

Temperature Dependency:

Typical characteristics (temperature dependency) of FECS45-10 are shown below.

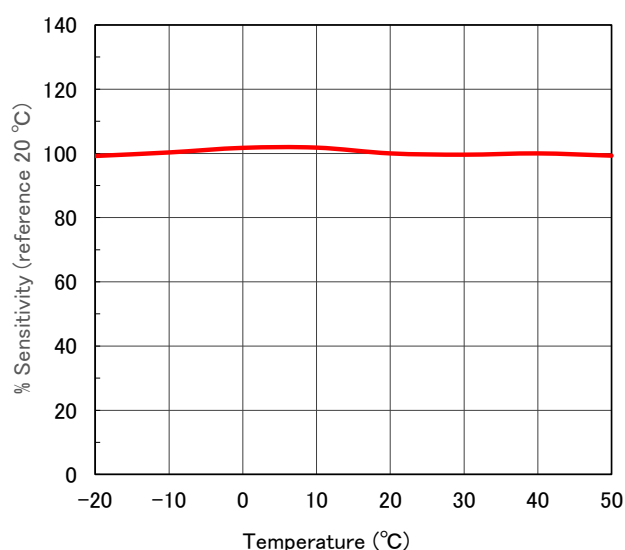

Specifications:


Detection Gas	Chlorine
Detection Range	0 ~ 10 ppm
Maximum Overload	50 ppm
Output Signal	-600 ± 150 nA/ppm (*1)
Repeatability	±2% (*1)
Resolution	0.1 ppm (*1)
Baseline Range (Clean air)	±0.2 ppm (*1)
Response Time (t ₉₀)	< 60 seconds (*1)
Baseline Shift (-20 ~ 40°C)	≤ 0.5 ppm (*1)
Long Term Output Drift	< 2% /month (*1)
Expected Life Time	> 2 years (*1,*2)
Operating Temperature	-20 ~ 50°C
Operating Humidity	15 ~ 90% RH
Operating Pressure Range	1013 hPa ±10%
Recommended Load Resistor	33Ω
Bias Voltage	Not required
Position Sensitivity	None
Recommended Storage Temp.	0 ~ 20°C
Cap Color	Brown
Weight	4.5g (approx.)

*1 Factory test data conditions: 20°C, 50%RH and 1013 hPa.


*2 Life expectancy in normal air under the factory test conditions is defined as the period until sensor output drops to 60% of its original value.

Dimensions:


Top view

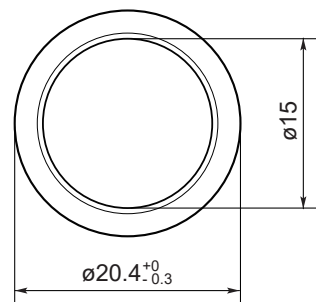

Side view

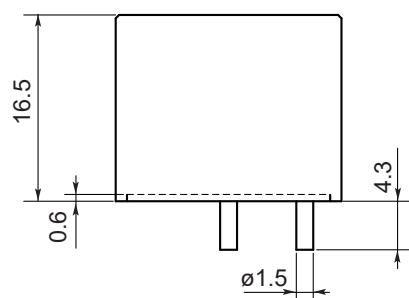

Bottom view

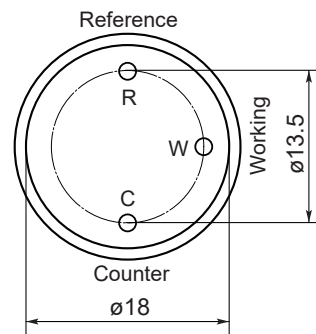

All dimensions in mm.

All tolerance ± 0.1mm unless otherwise stated.

Cross Sensitivity Data :

Table1 shows the typical response of FECS45-10 to interference gases.

Table1 Cross Sensitivity of FECS45-10 (20°C)

Gas	Concentration (ppm)	Typical Chlorine Concentration(ppm)Equivalent
Chlorine	10	10
Carbon Monoxide	300	0
Carbon Dioxide	5,000	0
Hydrogen	1,000	0
Nitrogen Dioxide	10	10
Nitric Oxide	35	< -0.3
Hydrogen Sulfide	15	< -7.5
Sulphur Dioxide	20	0
Ethanol	100	0

FIGARO USA INC.
121 S. Wilke Rd. Suite 300
Arlington Heights, IL 60005 USA
Tel: 847-832-1701
Fax: 847-832-1705
email: figarousa@figarosensor.com